### **Anchors aweigh**

Anchors aweigh is a sorting game in which children have to finish the pattern by moving the symbols to the right place. The rectangular wall game has a natural, modern frame made of birch plywood with a white painted front which compliments many environments.

Graphic colours Pantone no.









### Play module | Anchors aweigh

Article no.	Frame colour	Colour code	Size HxWxD	Mounting	Age	KG	
PP00700	White	RAL 9003	70x45x4,5cm	wallmount	2 - 8 years	5,8 KG	MDF, Beechwood, ABS, RVS, Birch Plywood



All our products are inspected, tested SGS and certified by SGS and TÜV.



European standard EN 71 specifies safety requirements for toys. Compliance with the standard is legally required for all toys sold in the European Union.



All our products only use FSC certified wood, so eco- and environment friendly!



Our products are comornium....
health, safety and environmental
protection standards for products
(A within the FI).

 
IKC | HQ EUROPE Dronten | The Netherlands +31 (0)321 38 77 30

IKC | HQ ASIA Shanghai | China +86 (0)573 82 58 61 83 sales.cn@ikcplay.com www.ikcplay.com.cn

### Playable on one side



 




















### Playable on both sides






 




 

### **Play Module**

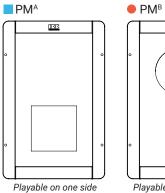


 


# FM Frame


 
#### Fence mounted

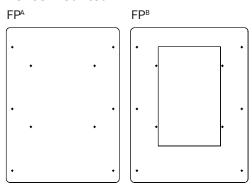






### Play system mounted


Play system of choice


### 



Play Module ■ PM<sup>A</sup> ● PM<sup>B</sup>
All the play modules needs to be mounted 40 cm above the ground.
This is for the optimum play comfort.

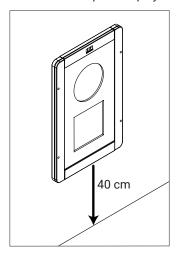


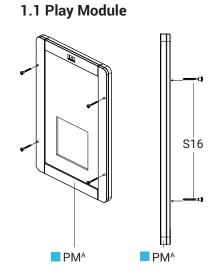


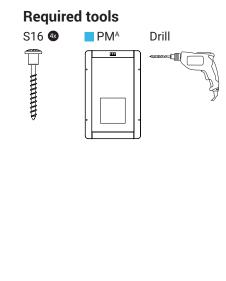


#### 2.1 Play Module with FM Frame ● PM<sup>B</sup>

To put a playmodule on a FM frame, you should remove these slats.

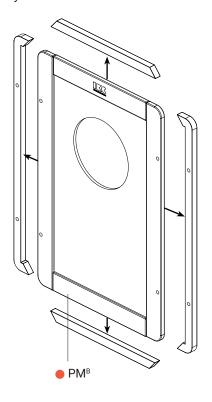


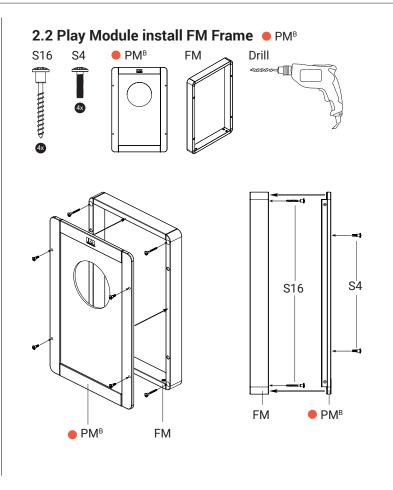


**3.1 Play module** ■ PM<sup>A</sup> ● PM<sup>B</sup> 3.2 Play module on play system **Required tools** To put a play module on a playsystem, ● PM<sup>B</sup> or ■ PM<sup>A</sup> PS you should remove these slats. S4 S18 ● PM<sup>B</sup> or ■ PM<sup>A</sup> PS PS S18 S4 ● PM<sup>B</sup> or ■ PM<sup>A</sup> ■ PM<sup>B</sup> or ■ PM<sup>A</sup>

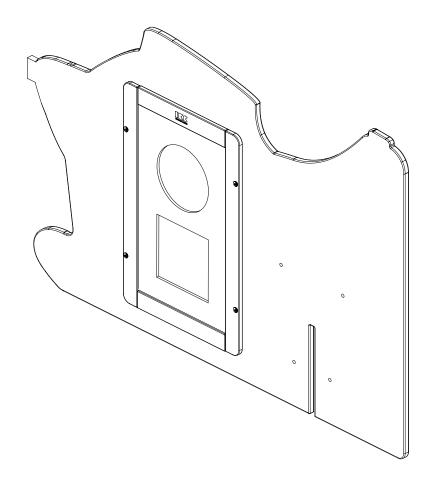

# Play module ■ PM<sup>A</sup> ● PM<sup>B</sup> All the play modules needs to be mounted 40 cm above the ground. This is for the optimum play comfort.

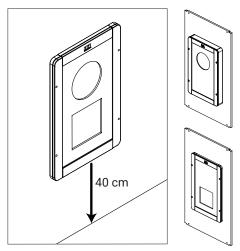


# 4.1 Install play module on play tower Required tools

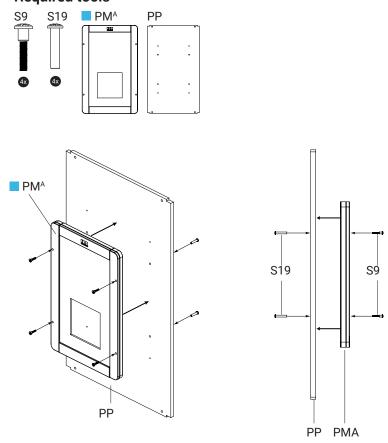


### 5.1 Install FM Frame to play module ● PM<sup>B</sup>


To put a playmodule on a FM frame, you should remove these slats.

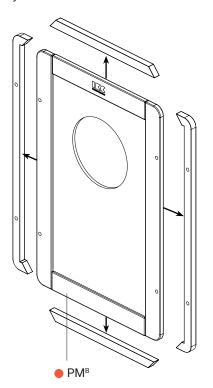


# 5.2 Install play module with FM frame on play tower Required tools

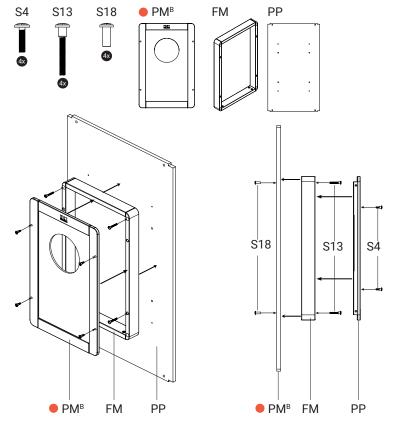

# Play module ■ PM<sup>A</sup> ● PM<sup>B</sup> All the play modules needs to be mounted 40 cm above the ground. This is for the optimum play comfort.

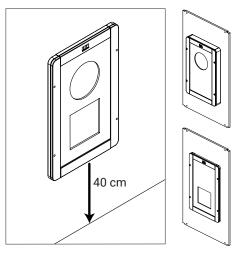


# 6.1 Install play module on fence Required tools

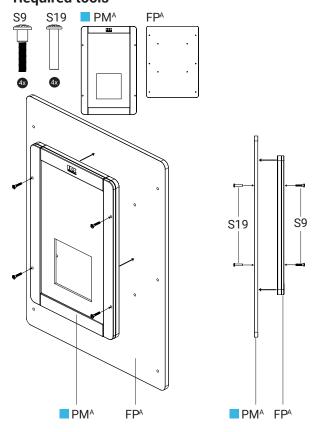


### 7.1 Install FM Frame to play module ● PM<sup>B</sup>

To put a playmodule on a FM frame, you should remove these slats.

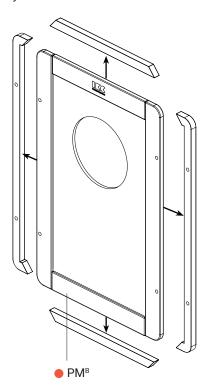


# 7.2 Install play module with FM frame on fence Required tools

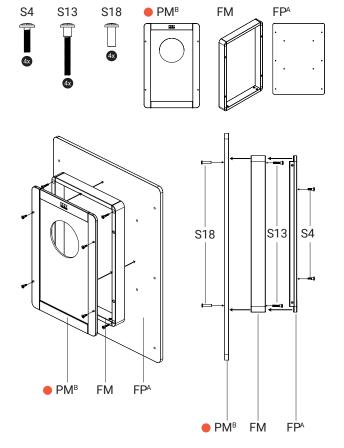

### 8.1 Remove the slats ● PM<sup>B</sup> ■ PM<sup>A</sup>

To put a playmodule on a fence (FP<sup>B</sup>), you should remove these slats.

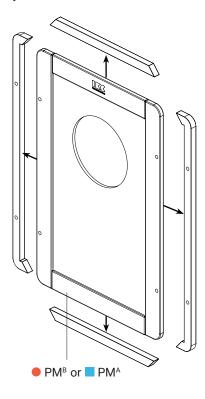

# 8.2 Install play module on fence Required tools

